




SANDCRAFT MOTORSPORTS DIFFERENTIAL SIDE COVER WEAR PAD INSTALLATION INSTRUCTIONS

THANK YOU FOR PURCHASING THIS KIT FROM SANDCRAFT!

Please read the instructions completely before beginning installation.

1. Remove the Differential Side Cover Plate.
2. Carefully remove the OE metal wear plates. Be sure not to scratch the surface of the Side Cover Plate.
3. Clean the Side Cover Plate thoroughly.
4. Insert your new SANDCRAFT Wear Plates ensuring they are fully inserted, flat and flush. Do not use any tools that might scratch the surface during installation.
5. Re-install the differential.


BEFORE INSTALLATION

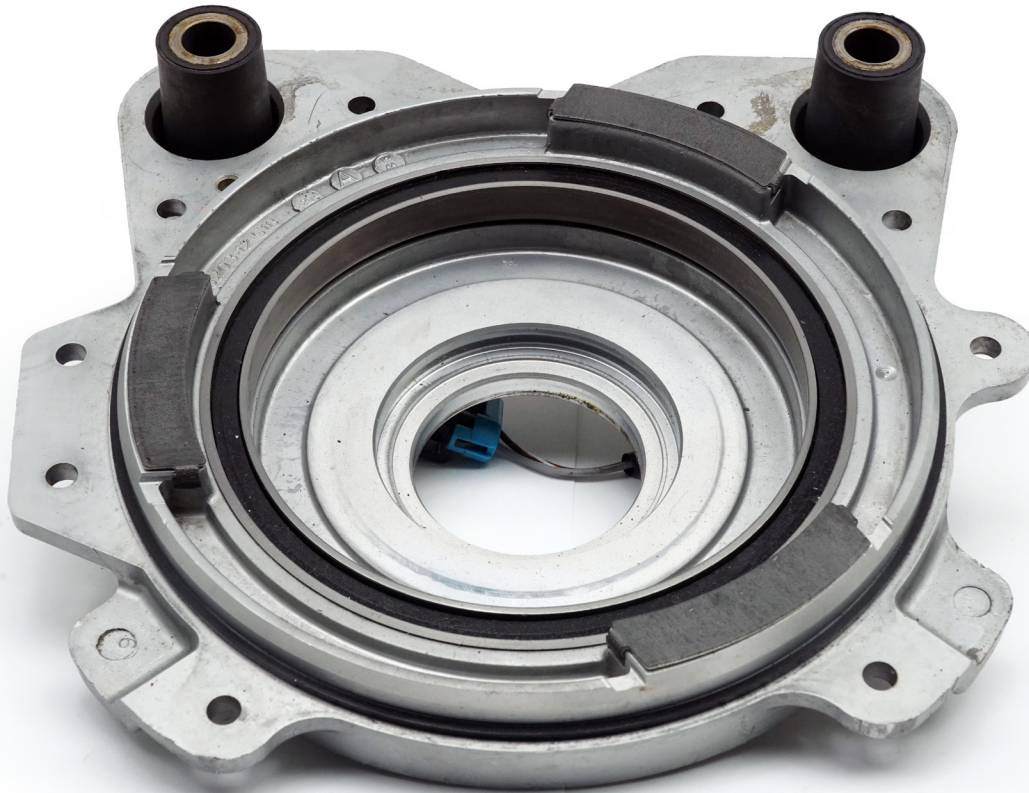



SANDCRAFT MOTORSPORTS DIFFERENTIAL SIDE COVER WEAR PAD INSTALLATION INSTRUCTIONS

AFTER INSTALLATION

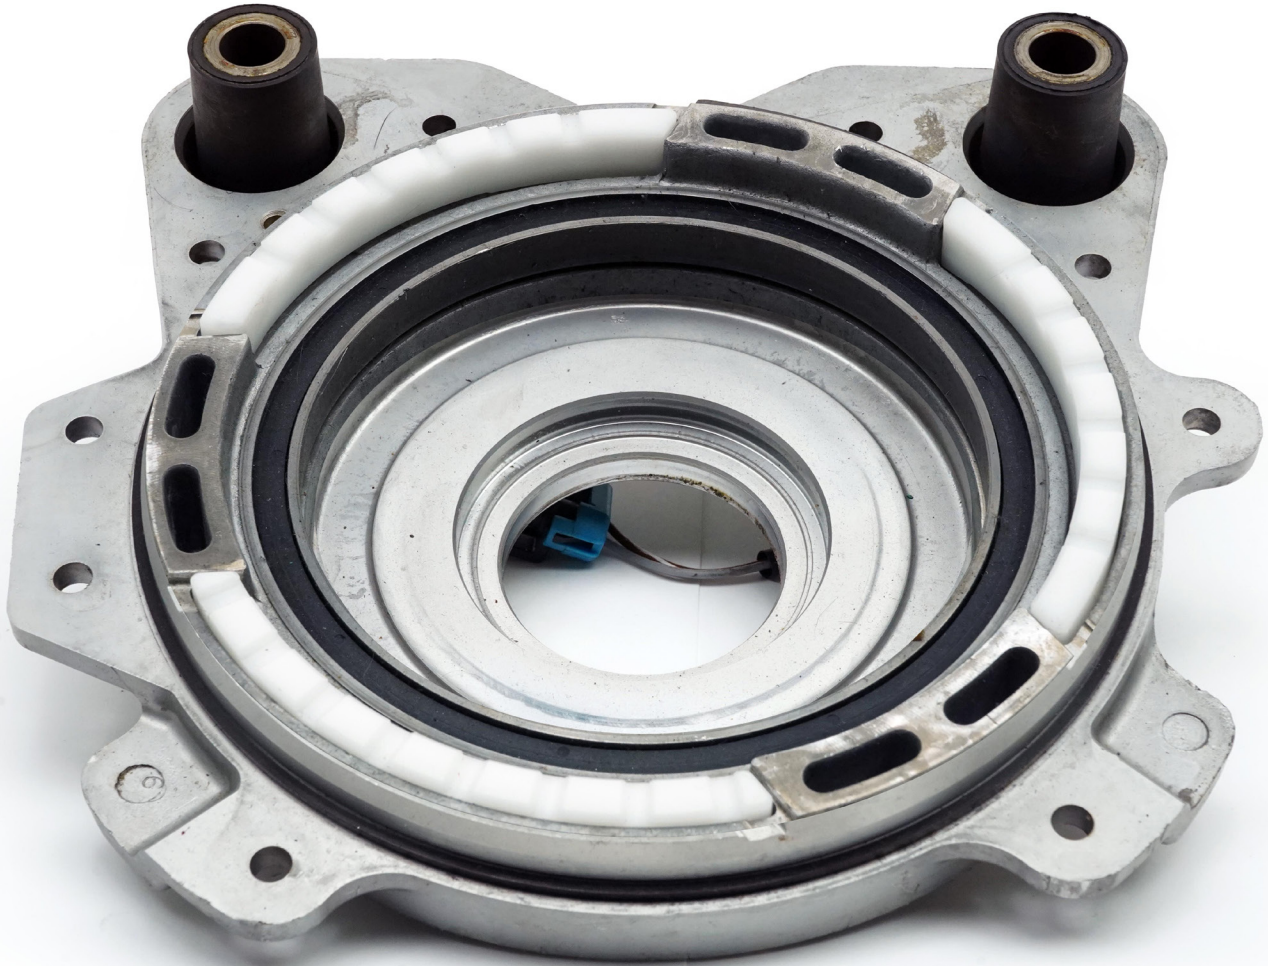

**PLEASE CONTACT US AT (480)-539-
4438 OR SANDCRAFT@SANDCRAFT-
MOTORSPORTS.COM IF YOU HAVE
ANY QUESTIONS.**